

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
A 1	A/C Ambient Temp. Sensor	90980-11070	B 7	Body ECU	90980-10803	
A 2	A/C Condenser Fan Motor	90980-10928	B 8	Buckle SW LH (LHD)	90980-11034	
A 3	A/C Lock Sensor	90980-11016		Buckle SW LH (RHD)	90980-10795	
	A/C Magnetic Clutch					
A 4	A/T Indicator Light SW	90980-12362	B 9	Buckle SW RH (LHD)	90980-10795	
	Back-Up Light SW			Buckle SW RH (RHD)	90980-11034	
	Neutral Start SW			Occupant Detection Sensor (LHD)	90980-10795	
A 5	ABS & BA & TRC & VSC Actuator	90980-12020	C 1	Camshaft Position Sensor	90980-10947	
A 6	ABS Actuator	90980-12116	C 2	Counter Gear Speed Sensor	90980-11156	
A 7	ABS Speed Sensor Front LH	90980-11002	C 3	Crankshaft Position Sensor	90980-10947	
A 8	ABS Speed Sensor Front RH					
A 9	Air Flow Meter	90980-11317	C 4	Cigarette Lighter	90980-11606	
A10	Air Fuel Ratio Sensor					
A11	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	C 5	Clock	90980-12200	
A12	Air Fuel Ratio Sensor (Bank 2 Sensor 1)					
A13	Airbag Sensor Front LH	90980-11856	C 7	Combination Meter	90980-12170	
A14	Airbag Sensor Front RH					
A15	Alternator	90980-09213	C 8	Combination Meter	90980-12200	
A16	Alternator	90980-11964	C 9	Combination SW	90980-11594	
A17	A/C Control Assembly	90980-12169	C10	Combination SW	90980-12183	
A18	A/C Room Temp. Sensor	90980-11918	C11	Combination SW (LH Turn Lever Type)	90980-11672	
A19	A/C Solar Sensor			Combination SW (RH Turn Lever Type)	90980-11671	
A20	A/C Thermistor					
A21	A/T Shift Lever Illumination		90980-12211	C12	Cruise Control Clutch SW	90980-10906
	O/D Main SW					
A22	Accelerator Position Sensor	90980-11144	C13	Curtain Shield Airbag Sensor LH	90980-12225	
A23	Air Inlet Control Servo Motor	90980-11909	C14	Curtain Shield Airbag Sensor RH		
A24	Air Mix Control Servo Motor					
A25	Air Vent Mode Control Servo Motor					
A26	Airbag Sensor Assembly	82824-50160	C15	Curtain Shield Airbag Squib LH	90980-12219	
A27	Airbag Sensor Assembly	90980-11872	C16	Curtain Shield Airbag Squib RH		
A28	Airbag Sensor Assembly	82824-50150	D 1	Diode (A/C No.1)	90980-11071	
A29	Airbag Squib (Front Passenger Airbag Assembly)	90980-12242	D 2	Diode (A/C No.2)	90980-10962	
A30	Airbag Squib (Front Passenger Airbag Assembly)	90980-12243	D 3	DLC3	90980-11665	
A31	Airbag Squib (Steering Wheel Pad)	90980-12160	D 4	Double Door Lock ECU	90980-10807	
A32	Automatic Light Control Sensor	90980-11107	D 5	Door Control Receiver	90980-11909	
A33	ABS Speed Sensor Rear LH	90980-11060	D 6	Door Courtesy SW Front LH	90980-10871	
A34	ABS Speed Sensor Rear RH					
A35	Auto Antenna Control Relay	90980-10797	D 7	Door Courtesy SW Front RH		
B 1	Back-Up Light SW	90980-11250	D 8	Door Courtesy SW Rear LH		
	Brake Fluid Level Warning SW	90980-11207	D 9	Door Courtesy SW Rear RH		
	Blower Motor	90980-10903	D10	Door Key Lock and Unlock SW Front LH	90980-12226	
	B 4	Blower Motor Controller		90980-11676		Door Lock Motor Front LH
		Blower Motor		90980-10903		Door Unlock Detection SW Front LH
B 5	Body ECU	90980-11915		Double Door Lock Motor Front LH		
	Body ECU	90980-11913		Position SW Front LH		
B 6	Body ECU	90980-11913	D11	Door Key Lock and Unlock SW Front RH		
	Body ECU	90980-11915		Door Lock Motor Front RH		
	Body ECU	90980-11913		Door Unlock Detection SW Front RH		
	Body ECU	90980-11915		Double Door Lock Motor Front RH		
	Body ECU	90980-11913		Position SW Front RH		
B 7	Body ECU	90980-11913	D12	Door Lock Control SW Front LH	90980-12122	
	Body ECU	90980-11915		Power Window Master SW		

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number	
D13	Door Lock Control SW Front RH	90980-12122	H 4	Headlight Cleaner Relay	90980-10939	
	Power Window Master SW		H 5	Headlight LH (High)	90980-11095	
D14	Door Lock Motor Rear LH	90980-12226	H 6	Headlight LH (Low)	90980-11149	
	Door Unlock Detection SW Rear LH		H 7	Headlight RH (High)	90980-11095	
	Double Door Lock Motor Rear LH		H 8	Headlight RH (Low)	90980-11149	
	Position SW Rear LH		H 9	Heated Oxygen Sensor	90980-11930	
D15	Door Lock Motor Rear RH		90980-12226	H10	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
	Door Unlock Detection SW Rear RH			H11	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-11028
	Double Door Lock Motor Rear RH			H12	Horn (High)	90980-10619
	Position SW Rear RH				Horn (Low)	
E 1	ECT Solenoid		90980-11658	H14	Headlight Beam Level Control SW	90980-10996
E 2	EFI Water Temp. Sensor (1MZ-FE)		90980-10737	H15	Headlight Cleaner SW	90980-10964
	EFI Water Temp. Sensor (2AZ-FE, 1AZ-FE)		90980-10735	H16	High Mounted Stop Light (w/ Rear Spoiler)	90980-11060
E 3	EGR Gas Temp. Sensor		90980-10899		High Mounted Stop Light (w/o Rear Spoiler)	90980-11148
E 4	EGR Valve Position Sensor	90980-11143	I 1	Ignition Coil and Igniter No.1	90980-11885	
E 5	Engine Oil Level Sensor (1MZ-FE)	90980-11235	I 2	Ignition Coil and Igniter No.2		
	Engine Oil Level Sensor (2AZ-FE, 1AZ-FE)	90980-10532	I 3	Ignition Coil and Igniter No.3		
E 6	Engine and ECT ECU (A/T)	90980-12142	I 4	Ignition Coil and Igniter No.4		
	Engine ECU (M/T)		I 5	Ignition Coil and Igniter No.5		
E 7	Engine and ECT ECU (A/T)	90980-12146	I 6	Ignition Coil and Igniter No.6		
	Engine ECU (M/T)		I 7	Injector No.1 (1MZ-FE)	90980-11153	
E 8	Engine and ECT ECU (A/T)	90980-12143		Injector No.1 (2AZ-FE, 1AZ-FE)	90980-11875	
	Engine ECU (M/T)		I 8	Injector No.2 (1MZ-FE)	90980-11153	
E 9	Engine and ECT ECU (A/T)	90980-12145		Injector No.2 (2AZ-FE, 1AZ-FE)	90980-11875	
	Engine ECU (M/T)		I 9	Injector No.3 (1MZ-FE)	90980-11153	
E10	Engine and ECT ECU (A/T)	90980-12144		Injector No.3 (2AZ-FE, 1AZ-FE)	90980-11875	
	Engine ECU (M/T)		I10	Injector No.4 (1MZ-FE)	90980-11153	
F 1	Front Clearance Light LH	90980-11156		Injector No.4 (2AZ-FE, 1AZ-FE)	90980-11875	
F 2	Front Clearance Light RH		I11	Injector No.5	90980-11153	
F 3	Front Fog Light LH	90980-11096	I12	Injector No.6		
F 4	Front Fog Light RH		90980-11162	I14	Ignition Key Cylinder Light	90980-12092
F 5	Front Side Turn Signal Light LH	Transponder Key Amplifier				
F 6	Front Side Turn Signal Light RH	90980-11019	I15	Ignition SW	90980-11615	
F 7	Front Turn Signal Light LH		I16	Inner Mirror	90980-11794	
F 8	Front Turn Signal Light RH	90980-11599	I17	Interior Light	90980-10908	
F 9	Front Wiper Motor		J 1	Junction Connector	90980-11542	
F10	Front Door Speaker LH (LHD)	82824-12260	J 2	Junction Connector		
	Front Door Speaker LH (RHD)	90980-10935	J 3	Junction Connector	90980-10803	
F11	Front Door Speaker RH (LHD)	82824-12260	J 4	Junction Connector	90980-10976	
	Front Door Speaker RH (RHD)	90980-10935	J 5	Junction Connector	90980-11661	
F12	Fuel Pump	90980-11077	J 6	Junction Connector		
	Fuel Sender		J 7	Junction Connector		
G 1	Glove Box Light and SW	90980-11098	J 8	Junction Connector		
H 1	Headlight Beam Level Control Actuator LH	90980-11016	J11	Junction Connector	90980-10976	
H 2	Headlight Beam Level Control Actuator RH		J12	Junction Connector	90980-11915	
H 3	Headlight Cleaner Motor	90980-11410	J13	Junction Connector		

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
K 1	Knock Sensor	90980-11166	P22	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	90980-10825	
K 2	Knock Sensor No.1		P23	Power Seat Motor (Front Passenger's Seat Lifter Control)		
K 3	Knock Sensor No.2		P24	Power Seat Motor (Front Passenger's Seat Reclining Control)		
K 4	Kick Down SW	90980-11156	P25	Power Seat Motor (Front Passenger's Seat Slide Control)		
L 1	License Plate Light LH	90980-11148	R 1	Radiator Fan Motor		90980-10928
L 2	License Plate Light RH	90980-10803	R 2	Radio and Player	90980-10997	
L 3	Light Failure Sensor		R 3	Radio and Player	90980-10996	
L 4	Luggage Compartment Door Opener Motor	90980-10825	R 4	Radio and Player	90980-10803	
	Luggage Compartment Light SW		R 5	Radio and Player	90980-10819	
L 5	Luggage Compartment Light	90980-11148	R 7	Radio and Player with Display	90980-11909	
M 1	Mirror Heater LH	90980-12059	R 8	Radio and Player with Display	90980-10997	
	Remote Control Mirror LH		R 9	Radio and Player with Display	90980-10996	
M 2	Mirror Heater RH		R10	Rear Fog Light SW	90980-12113	
	Remote Control Mirror RH		R11	Rheostat	90980-10908	
M 3	Moon Roof Control ECU and Motor		90980-10997	R12	Rain Sensor	82824-50130
M 4	Moon Roof Control SW	90980-10789	R13	Rear Combination Light LH	90980-11587	
	Personal Light		R14	Rear Combination Light RH		
N 1	Noise Filter (Ignition)	90980-10843	R15	Rear Speaker LH	90980-11060	
N 4	Noise Filter	90980-10860	R16	Rear Speaker RH		
O 1	Oil Pressure Sensor	90980-11363	R17	Rear Window Defogger (LHD)	90980-10913	
P 1	Power Steering Oil Pressure SW	90980-11428		Rear Window Defogger (RHD)	90980-10914	
P 2	Pressure SW	90980-10943	R18	Rear Window Defogger (LHD)	90980-10914	
P 3	Parking Brake SW	90980-10871		Rear Window Defogger (RHD)	90980-10913	
P 4	Power Outlet (Front)	90980-10760	R19	Remote Control Mirror SW	90980-11657	
P 5	Power Outlet (Rear)	90980-10860	R22	Radio and Player with Display	90980-12259	
P 6	Power Window Control SW Front LH	90980-10789	S 1	Starter	90980-11400	
P 7	Power Window Control SW Front RH	82824-12230	S 2	Starter	90980-09463	
P 8	Power Window Control SW Rear LH	90980-10789	S 3	Seat Heater SW LH	90980-10964	
	Power Window Control SW Rear RH	82824-12230	S 4	Seat Heater SW RH	90980-10933	
P10	Power Window Motor Front LH (LHD)	82824-12270	S 5	Shift Lock Control ECU	90980-11909	
	Power Window Motor Front LH (RHD)	90980-10797	S 6	Skid Control ECU	90980-11638	
P11	Power Window Motor Front RH (LHD)	82824-12270	S 7	Skid Control ECU	90980-11637	
	Power Window Motor Front RH (RHD)	90980-10797	S 8	Skid Control ECU	90980-11476	
P12	Power Window Motor Rear LH	90980-10797	S 9	Skid Control ECU	90980-11421	
P13	Power Window Motor Rear RH		S10	Skid Control ECU	90980-11392	
P14	Pretensioner LH	90980-12253	S11	Skid Control ECU	90980-11391	
P15	Pretensioner RH		S12	Skid Control ECU	90980-11390	
P16	Power Seat Control SW (Driver's Seat)	90980-10997	S13	Steering Sensor	90980-12162	
P17	Power Seat Control SW (Front Passenger's Seat)		S14	Stop Light SW	90980-11118	
P18	Power Seat Motor (Driver's Seat Front Vertical Control)		90980-10825	S15	Side Airbag Sensor LH	90980-12241
P19	Power Seat Motor (Driver's Seat Lifter Control)			S16	Side Airbag Sensor RH	
P20	Power Seat Motor (Driver's Seat Reclining Control)		90980-10906	S17	Seat Heater LH	
P21	Power Seat Motor (Driver's Seat Slide Control)		S18	Seat Heater RH		

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
S19	Side Airbag Squib LH	90980-11864	V 5	VVT Solenoid	90980-11162
S20	Side Airbag Squib RH		V 6	VSC Warning Buzzer	90980-10906
T 1	Throttle Control Motor	90980-11156	V 7	Vanity Light LH	90980-10621
T 2	Throttle Position Sensor (1MZ-FE)	90980-10711	V 8	Vanity Light RH	
	Throttle Position Sensor (2AZ-FE, 1AZ-FE)	90980-11858	W 1	Washer Motor	90980-10981
T 3	Turbine Speed Sensor	90980-11156	W 2	Water Temp. SW No.1	90980-11235
T 4	TRC OFF SW	90980-11013	W 3	Water Temp. SW No.2	90980-11243
T 5	Turn Signal Flasher Relay	90980-10799	W 4	Wiper Relay	90980-12166
T 6	Tweeter LH	90980-10860	Y 1	Yaw Rate Sensor	90980-12080
T 7	Tweeter RH				
U 1	Unlock Warning SW				
V 1	VSV (ACIS)	90980-11149	Z 1	Option Connector (Engine Hood Courtesy SW)	90980-11051
V 2	VSV (AICV)	90980-11156	Z 2	Option Connector (TVSS ECU) (LHD)	90980-10995
V 3	VSV (EGR)	90980-11149		Option Connector (TVSS ECU) (RHD)	90980-11915
V 4	VSV (EVAP)	90980-11156	Z 3	Option Connector (TVSS Siren)	90980-10988